

# SPL BRAKE COOLING DEFLECTORS


---

The brake cooling deflectors are mounted to our v2/v3 tension rods and the lower arm. On newer Nissan models, the lower arm may have a mounting hole, in which case our brake cooling deflectors will bolt up. Otherwise it is necessary to drill a small hole to mount the deflector to keep it from wobbling at speed.

Start by mounting the deflectors on the tension rods, then mark the position of the lower arm bolt hole on the lower arm. Drill the lower arm with a 5/16" drill bit.



Mount brake deflector to the lower arm using the supplied bolt and nut.

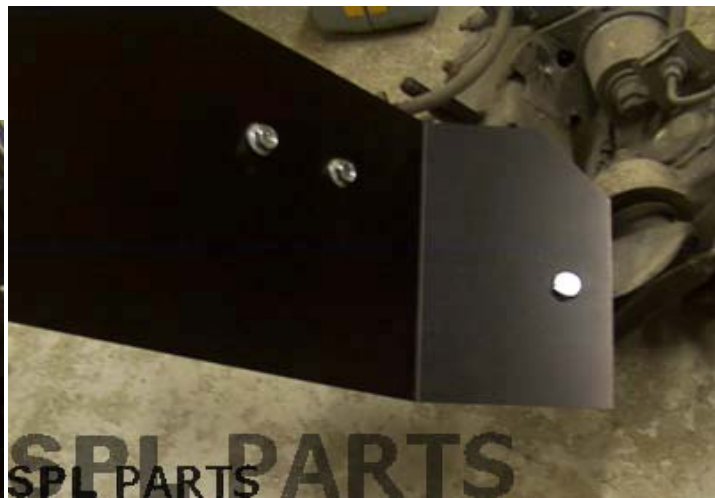

Put the wheel on and turn your steering wheel from lock to lock. Check that there is no interference between the deflectors and any lines, etc. Trim the deflectors if necessary. Make sure all lines, etc are secured and will not contact the deflectors due to air buffeting, vibration, etc.